
KEURIG


MY K-CUP®

UNIVERSAL REUSABLE COFFEE FILTER

INSTRUCTIONS FOR CLASSIC SERIES BREWERS

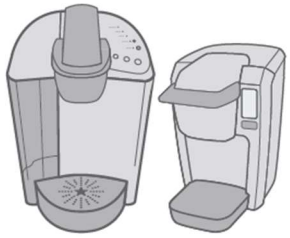

Need help identifying your brewer? Visit www.Keurig.com or www.Keurig.ca (Canada) for assistance

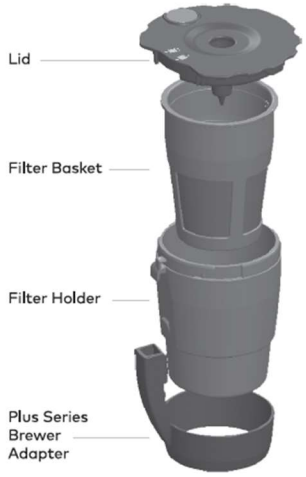


SETUP

The Plus Series Brewer Adapter is not compatible with Classic Series brewers. Remove before use.

To remove:

- Grasp the top of the Filter Holder with one hand
- Use your opposite thumb to push down firmly on the Plus Series Brewer Adapter opening, while grasping the base

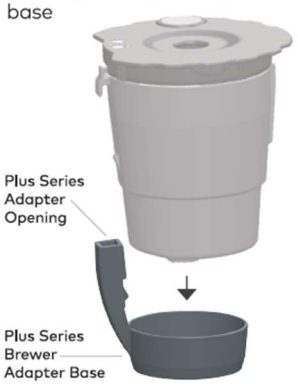

FILLING


1. Remove the lid, by turning it counter- clockwise to the UNLOCK position



2. Fill the Filter Basket to your desired fill line (cup or travel mug) and place in the Filter Holder
   - **CAUTION: Never compress grounds or fill above the top fill line as this may hinder brewer performance. If grinding your own beans, start with a coarser grind similar to a French press. Avoid a fine espresso grind as it may clog the screen.**
   - NOTE: The My K-Cup® Universal Reusable Filter is designed for ground coffee only. The use of tea leaves, hot cocoa, or other powdered beverages is not recommended.




3. While in the unlock position replace the Lid, making sure that it sits flat atop the Filter Holder.
   - NOTE: If having difficulty, try securing the Lid firmly onto the Filter Basket before inserting into the Filter Holder
4. Turn the lid clockwise to LOCK
   - **CAUTION: Turning too far may cause lid to break**

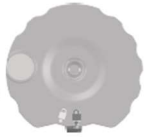

BREWING

1. Remove the K-Cup® Holder Assembly on your brewer
   - Lift the handle
   - Grasp the Holder Assembly and push up from below
   - NOTE: Make sure to hold the housing firmly
2. Insert your filled My K-Cup® Universal Reusable Filter into the empty Holder Assembly. The arrow on the My K-Cup® Filter Lid should line up with the arrow on your Classic Series brewer.
3. Lower brewer handle and brew your desired volume

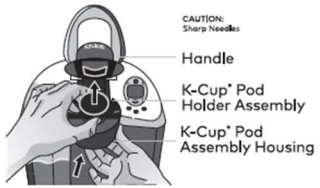

CLEANING

1. Fully disassemble the My K-Cup® Universal Reusable Filter before washing and dispose of used coffee grounds inside the internal Filter.
2. Pre-rinse each component.
3. Clean the My K-Cup® Universal Reusable Filter.
   - **By dishwasher (recommended):** Ensure all components are safely secured on the top rack only.
   - **By hand:** Use warm soapy water to thoroughly clean all components. Rinse and air dry all components.

If you experience any problems using your My K-Cup® Universal Reusable Coffee Filter, contact Customer Service at 1-866-901-BREW (2739).

For additional information, please visit www.Keurig.com (U.S.) or www.Keurig.ca (Canada) or follow us at twitter.com/Keurig or facebook.com/Keurig.


DC0000001022 Rev B

KEURIG


MY K-CUP®

UNIVERSAL REUSABLE COFFEE FILTER

INSTRUCTIONS FOR PLUS SERIES BREWERS

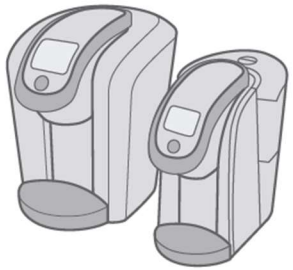

Need help identifying your brewer? Visit www.Keurig.com or www.Keurig.ca (Canada) for assistance

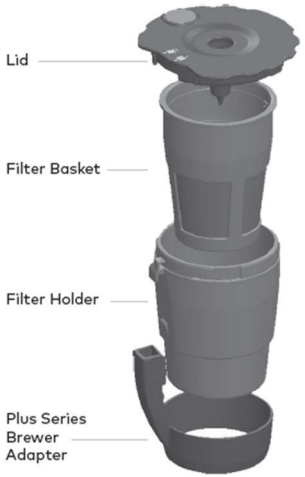

SETUP

The Plus Series Brewer Adapter is only compatible with Plus Series brewers and is required for proper use.

To attach:

Line up the Plus Series Brewer Adapter opening with the Filter Holder hook and carefully slide into place.

- NOTE: Make sure it is securely fastened before use



FILLING


1. Remove the lid, by turning it counter- clockwise to the UNLOCK position



2. Fill the Filter Basket to your desired fill line (cup or travel mug) and place in the Filter Holder
   - **CAUTION: Never compress grounds or fill above the top fill line as this may hinder brewer performance. If grinding your own beans, start with a coarser grind similar to a French press. Avoid a fine espresso grind as it may clog the screen.**
   - NOTE: The My K-Cup® Universal Reusable Filter is designed for ground coffee only. The use of tea leaves, hot cocoa, or other powdered beverages is not recommended.




3. While in the unlock position replace the Lid, making sure that it sits flat atop the Filter Holder.
   - NOTE: If having difficulty, try securing the Lid firmly onto the Filter Basket before inserting into the Filter Holder
4. Turn the lid clockwise to LOCK
   - **CAUTION: Turning too far may cause lid to break**

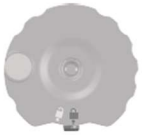

BREWING

1. Make sure the Plus Series Brewer Adapter is installed on My K-Cup® Universal Reusable Filter
2. Lift brewer handle and insert the My K-Cup® Universal Reusable Filter into the cup holder. Press down firmly to secure.
   - **NOTE: The Plus Series Brewer Adapter arm should be facing you during this process**
3. Lower brewer handle and press the brew button.
   - **NOTE: If the Main Menu appears with six menu options, choose option #2 (mug) or #4 (cup) for the optimal brew**

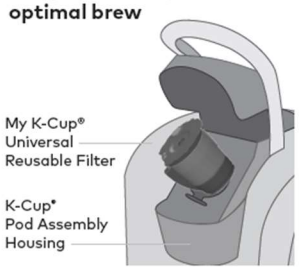

CLEANING

1. Fully disassemble the My K-Cup® Universal Reusable Filter before washing and dispose of used coffee grounds inside the internal Filter.
2. Pre-rinse each component.
3. Clean the My K-Cup® Universal Reusable Filter.
   - **By dishwasher (recommended):** Ensure all components are safely secured on the top rack only.
   - **By hand:** Use warm soapy water to thoroughly clean all components. Rinse and air dry all components.

If you experience any problems using your My K-Cup® Universal Reusable Coffee Filter, contact Customer Service at 1-866-901-BREW (2739).

For additional information, please visit www.Keurig.com (U.S.) or www.Keurig.ca (Canada) or follow us at twitter.com/Keurig or facebook.com/Keurig.

DC0000001020 Rev B