KEURIG®

K-Mini® Go

Use & Care Guide

Get the most from your
new Keurig® brewer

Before You Brew

1 Plug & Place

Remove packing tape from brewer. Plug into an outlet.

Place a large mug (10oz minimum) on the drip tray.

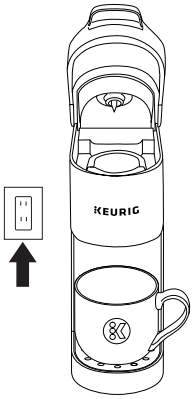

2 Rinse & Fill

Remove the water reservoir lid, then lift the reservoir straight up to remove it. If you have a Keurig® Water Filter (sold separately), install it now. Refer to your Water Filter Starter Kit for instructions.

Rinse reservoir with fresh water and fill to the **MAX FILL** line.

Replace water reservoir, making sure the tank is seated properly in the base. Replace lid.

NOTE: Do not use distilled water.

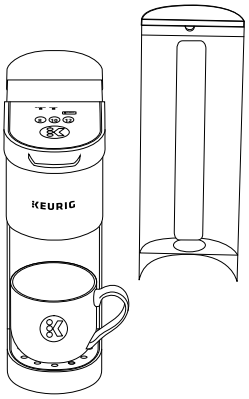

3 Lift & Lower

Lift and lower the handle. **Do not insert a K-Cup® pod.** The brewer will power on automatically.

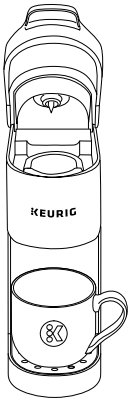

4 Cleansing Brew

The 3 cup sizes will blink. Press the **8oz** button, then press the blinking **BREW** button to start a cleansing brew. Pour the hot water into the sink.

Do not remove the water reservoir or lift the handle once the BREW button has been pressed until the brew has completed. The one-time setup process is now complete and you are ready to brew!

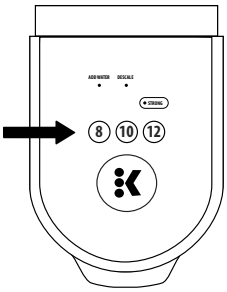

Brew Your First Cup

5 Place Mug & Pod

Place a mug on the drip tray. If using a travel mug, remove the drip tray and place the mug on the drip tray base. Lift the handle and place a K-Cup® pod in the K-Cup® pod holder. Lower the handle completely to close the lid.

Do not remove the foil lid on the K-Cup® pod.

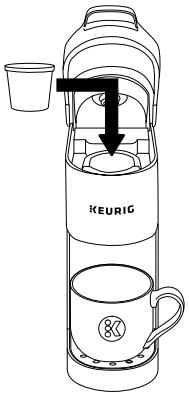

6 Brew & Enjoy!

The 3 brew size buttons will blink. Select your brew size, then press the blinking **BREW** button. The **BREW** button will remain illuminated while brewing. Brewing is complete when all the buttons are illuminated. Lift the handle and dispose of the K-Cup® pod. For a bolder brew, the **STRONG** button may be turned on before or after brew size is selected.

CAUTION: While brewing, there is extremely hot water in the K-Cup® pod holder. To avoid injury, do not lift the handle during the brewing process.

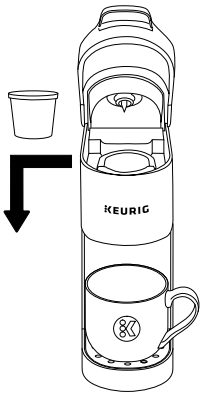

Brewer Features

FAST & FRESH-BREWED: Coffee made in minutes.

STRONG BREW: For a bolder, more intense cup.

BACK-TO-BACK BREWING: Immediately brew a second cup; no need to wait for reheating.

TRAVEL MUG FRIENDLY: Accommodates travel mugs up to 7" tall.

MAINTENANCE ALERT: Reminds you to descale after every 500 brews.

COMPATIBLE WITH THE MY K-CUP® UNIVERSAL REUSABLE COFFEE FILTER: Brew your own ground coffee (sold separately).

AUTO OFF: Automatically turns your brewer off after a brew is complete or after 5 minutes of inactivity for energy savings.

DESCALE MODE: Once in mode, follow guided process found in the Use & Care Guide on support.keurig.com to effectively remove scale from your brewer.

HIGH ALTITUDE: To ensure your coffee maker works properly at higher altitudes (5,000 feet), please enable the High Altitude Brewing Mode on your coffee maker.

1. Begin with the brewer plugged in and powered off.
2. Press and hold the **10oz** button and **STRONG** button for 3 seconds. The **12oz** button will illuminate to confirm that the High Altitude Brewing Mode has been enabled.
3. High Altitude Mode will remain enabled until steps 1-2 are repeated and the **12oz** light turns off and the **8oz** light turns on to confirm that the High Altitude Brewing Mode is disabled.

HIGH ALTITUDE BREWING: While holding the brewer handle up, push down slowly on the K-Cup® pod in the pod holder until the bottom of the K-Cup® pod is punctured by the exit needle.

STRONG BREW MODE: Keeps the Strong feature on with every brew.

With the brewer plugged in and powered off, press and hold the **STRONG** button for 3 seconds (**STRONG** will blink twice).

To exit the mode, repeat the same steps.

To turn the Strong Mode off for a single brew, press the **STRONG** button once until no longer illuminated.

Strong Mode will be reactivated for the next brew automatically.

Caring For Your Brewer

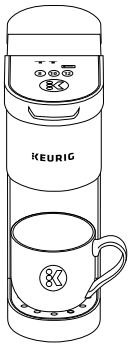

Brewer Exterior

Keep your Keurig® brewer looking its best by cleaning the exterior from time to time. Just clean with a damp, soapy, lint-free, nonabrasive cloth. Never immerse the brewer in water or other liquids.

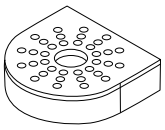

Drip Tray

The drip tray overflow should be emptied and cleaned occasionally. To remove, lift up off brewer base, keeping it level to avoid spilling. Rinse and clean with a damp, soapy, lint-free, nonabrasive cloth. Hand-wash only.

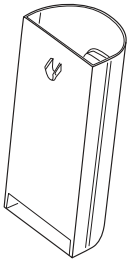

Water Reservoir

The water reservoir should be cleaned periodically by wiping the inside of the reservoir and underside of the lid with a damp, nonabrasive, lint-free cloth. Do not dry the inside of the water reservoir with a cloth, as lint may remain. Allow the reservoir to dry completely. Hand-wash only.

Regular Maintenance

Descaling Your Brewer: Keurig® brewer performance matters. Descaling regularly removes mineral buildup that can affect taste and quality, ensuring your Keurig® brewer brews a perfect cup every time. In order for the **DESCALE** light to turn off, you must enter **DESCALE MODE** on the brewer. To enter **DESCALE MODE**, press and hold the **8oz** and **12oz** buttons together for 3 seconds. For more information on the descaling procedure, go to **keurig.com/descale**.

Frequency	Product	Benefit
Weekly	Keurig® Rinse Pods	Weekly cleaning with Keurig® Rinse Pods helps reduce flavor carryover between brews
Every 2 months	Keurig® Water Filters	Keep your water fresh and help remove impurities
Every 3 months or when the Descale notification turns on*	Keurig® Descaling Solution Keurig® Descaling Pouch**	Eliminate mineral buildup to enhance the taste of your coffee and preserve the long-term health and performance of your coffee maker

*To turn off Descale notification, follow the full descaling procedure as outlined in this guide and the Use & Care Guide at support.keurig.com.
**Descaling Pouch provides 1 month of coverage.

If the brewer has been in storage or hasn't been used in days, run a cleansing brew before brewing your beverage.

On a weekly basis, **hand-wash** the water reservoir, lid, and drip tray with warm, soapy water and rinse clean.

CAUTION: Parts are not dishwasher safe.

NOTE: Do not dry the inside of the water reservoir with a cloth, as lint may remain.

For detailed brewer cleaning and descaling instructions, videos, and the full Use & Care Guide, visit support.keurig.com.

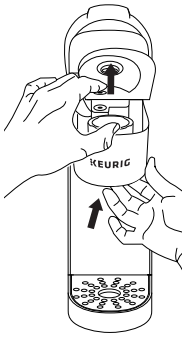

K-Cup® Pod Holder

To remove the K-Cup® pod holder from the brewer, lift the handle and grasp the top of the K-Cup® pod holder with one hand while pushing up on the bottom of the K-Cup® pod holder from underneath with the other until it releases. After cleaning, align the K-Cup® pod holder with the opening, using the two front ribs as a guide, and snap into place from the top.

CAUTION: There are sharp needles that puncture the K-Cup® pod above the K-Cup® pod holder and in the bottom of the K-Cup® pod holder. To avoid risk of injury, do not put your fingers in the K-Cup® pod holder.

NOTE: Always remove and dispose of the used K-Cup® pod after brewing.

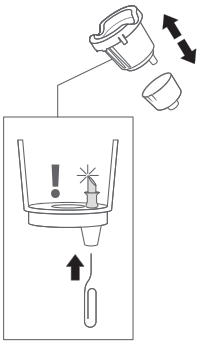

Exit Needle

Remove the pod holder assembly and detach the funnel. Locate the exit needle on the inside bottom of the K-Cup® pod holder. Insert a straightened paper clip into the exit needle to loosen any coffee grounds.

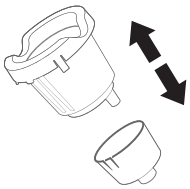

Funnel

Washing the funnel ensures a fresh beverage experience. The funnel should be washed regularly and can be removed from the K-Cup® pod holder by pulling on it until it pops off. To replace it, orient the snaps to the indent and just snap it back onto the K-Cup® pod holder.

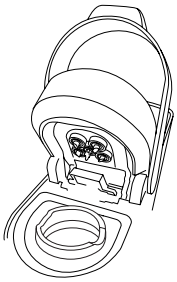

Entrance Needle

Lift the brewer handle and locate the entrance needle on the underside of the lid. To clean the holes in the needle, hold the brewer handle in the upward position and with your other hand, carefully insert a straightened paper clip into all the holes. Gently move it around to loosen any coffee grounds. Lower the handle completely and run a cleansing brew two times. Do not insert a K-Cup® pod.

Descaling Procedure

NOTE: The full descaling procedure must be completed to turn off the **DESCALE** light.

Descaling Procedure

Before you begin, you will need a large ceramic mug (14oz minimum), fresh water, Keurig® Descaling Solution, and access to a sink. Do not use a paper cup. Ensure that there is no beverage pod in the K-Cup® pod holder. The descaling procedure takes approximately 10-15 minutes.

Empty the water from the water reservoir. If using a Keurig® Water Filter, remove and set aside.

STEP 1: Prepare the Brewer

Pour the entire bottle of Keurig® Descaling Solution into an empty water reservoir. Then fill the empty bottle with water and pour into the water reservoir. **Do not insert a K-Cup® pod.** Place a large mug on the drip tray.

STEP 2: Descale the Brewer

To activate **DESCALE MODE**, begin with the brewer plugged in and powered off, then press and hold the **8oz** and **12oz** buttons together for 3 seconds. When flashing, press the **BREW** button to start the descaling process. Once the brew is complete, pour the hot liquid into the sink. Repeat this step two to three more times until the **ADD WATER** light illuminates.

STEP 3: Fresh Water Rinse

Empty and rinse the water reservoir, rinse the tank thoroughly, and refill to the **MAX FILL** line with fresh water. When flashing, press the **12oz** and **BREW** buttons to start the rinsing process. Once the brew is complete, pour the liquid into the sink. Continue to brew 12oz until the Descale notification turns off (there may be residual water left in the tank). The brewer has now exited **DESCALE MODE** and will be ready for use!

NOTE: Liquid dispensed in the fresh water rinse may be room temperature.

Troubleshooting

Grounds in Your Coffee

Grounds may have gathered in the exit or entrance needles and can be cleaned using a straightened paper clip or similar tool.

- Clean the exit needle of the K-Cup® pod holder. Refer to the exit needle care instructions.
- Clean the brewer entrance needle. Refer to the entrance needle care instructions.

For optimal enjoyment and to limit grounds in your cup during hot water brews or when transitioning from brewing a coffee pod to a non-coffee pod (e.g., tea or cocoa), clean the exit and entrance needles per the instructions provided and perform two cleansing brews.

Brewer Will Not Brew

The water level must be at a minimum level to brew. If the water level in the tank is low, add water to be at least half full. Repeat the brew process by selecting the desired size button, then press the **BREW** button.

Brewing a Partial Cup

Press and hold the **12oz** and **BREW** buttons. After 3 seconds, water will start dispensing; continue holding until all water purges from the brewer, then release the buttons. Discard contents into the sink. Press any button or lift the handle to initiate the next brew.

- The exit needle may be clogged. Refer to the exit needle care instructions.
- Clean the K-Cup® pod holder; see K-Cup® pod holder care instructions.
- The brewer may need to be descaled. If you have repeated the descaling procedure on your brewer two times and it is still only brewing a partial cup, contact Customer Service.

Brewer Does Not Have Power or Shuts Off

- Make sure that the power button has been turned on.
- Plug brewer into its own outlet. If the electric circuit is overloaded with other appliances, your brewer may not function properly. The brewer should be operated on its own circuit, separate from other appliances.
- For energy savings, the brewer automatically turns off 5 minutes after the last brew. Press any button or lift the handle to turn the brewer on.
- If the brewer still doesn't have power, contact Customer Service.

Helpful Hints

Water quality varies greatly. If you notice an undesirable taste in your beverage (such as chlorine or mineral tastes), we recommend using bottled or filtered water. Do not use distilled water.

Service

Beyond these recommended cleaning and maintenance procedures, this brewer is not user serviceable. For service, please refer to the Warranty section of this guide.

Storage

Empty the water reservoir before storing or transporting and take care to ensure that you store your brewer in a safe and frost-free environment. When you prepare to use it after storage, we recommend rinsing the water reservoir with fresh water and descaling the brewer as detailed in the Descaling Procedure section.

If you plan to move your brewer to a different location, turn the brewer off, unplug it, and empty the water reservoir. If your brewer has been in an environment below freezing, please be sure to let it warm to room temperature for at least 2 hours before using.

Click or Call!

Have Questions?

We're here to help. Visit **support.keurig.com** for step-by-step videos on cleaning, descaling, and more.

Still Need Help?

Give us a call at
1-866-901-BREW (2739).

Warranty

LIMITED ONE-YEAR WARRANTY

Keurig Green Mountain, Inc. (Keurig) warrants that your brewer will be free of defects in materials or workmanship under normal home use for one year from the date of purchase. It is recommended that you register your brewer on keurig.com/new so that your purchase information will be stored in our system. Keurig will, at its option, repair or replace a defective brewer without charge upon receipt of proof of the date of purchase. If a replacement brewer is necessary to service this warranty, the replacement brewer may be new or reconditioned. If a replacement brewer is sent, a new limited one-year warranty will be applied to the replacement brewer.

This warranty only applies to brewers operated in the United States and Canada. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state and, in the case of Canada, from province to province.

Only the use of Keurig® K-Cup® brand pods and accessories will guarantee the proper functioning and lifetime of your Keurig® brewer. Any damage to or malfunction of your brewer resulting from the use of non-Keurig® pods and accessories may not be covered by this warranty or may result in a service fee if the damage or malfunction is determined to be caused by such use.

WHAT IS NOT COVERED BY THE LIMITED WARRANTY?

THIS WARRANTY DOES NOT COVER CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND DOES NOT COVER INCIDENTAL COSTS AND EXPENSES RESULTING FROM ANY BREACH OF THIS WARRANTY, EVEN IF FORESEEABLE. Some states or provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you depending on the state or province of purchase.

Nor does this warranty cover damages caused by use of non-Keurig® pods or accessories, services performed by anyone other than Keurig or its authorized service providers, use of parts other than genuine Keurig® parts, or external causes such as abuse, misuse, inappropriate power supply, or acts of God.

OTHER LIMITATIONS

THIS WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ANY OTHER EXPRESS WARRANTY, WHETHER WRITTEN OR ORAL. IN ADDITION, KEURIG HEREBY SPECIFICALLY DISCLAIMS ALL OTHER WARRANTIES WITH RESPECT TO YOUR KEURIG® BREWER, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. Some states or provinces do not allow disclaimers of such implied warranties or limitations on how long an implied warranty lasts, so the above limitation may not apply to you depending on the state or the province of purchase.

HOW DO YOU OBTAIN WARRANTY SERVICE?

Keurig® brewers are high-quality appliances and, with proper care, are intended to provide years of satisfying performance. However, should the need arise for warranty servicing, simply call Keurig Customer Service at our toll-free phone number, 1-866-901-BREW (2739). Please do not return your brewer for servicing without first speaking to Keurig Customer Service to obtain a Return Materials Authorization (RMA) number. Keurig® brewers returned without an RMA number will be returned to the sender without servicing.

K-Mini® Go

SINGLE SERVE COFFEE MAKER

A. Handle

B. K-Cup® Pod Holder Assembly

C. Drip Tray Plate

D. Drip Tray

E. Drip Tray Base

F. Water Reservoir Lid

G. Water Reservoir

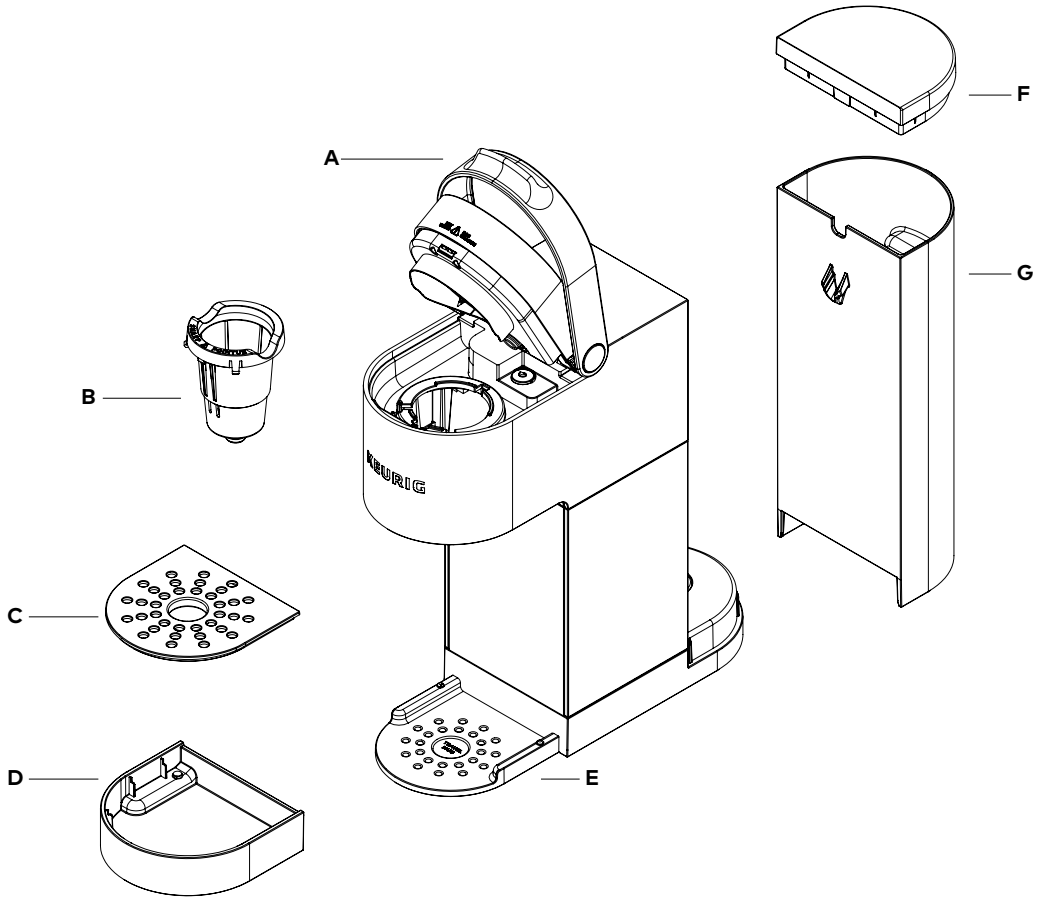

For replacement parts, please visit **www.keurig.com**.

Coffeehouse taste in your own home.

FIND YOUR PERFECT POD

With over 75 brands and hundreds of varieties, find your match at

keurig.com/new

Have questions? We're here to help. Visit support.keurig.com for troubleshooting videos, maintenance recommendations, and the full Use & Care Guide.

Still need help? Give us a call at 1-866-901-BREW (2739).

AW0000000935 REV A